


### 1.3 Front Panel Features

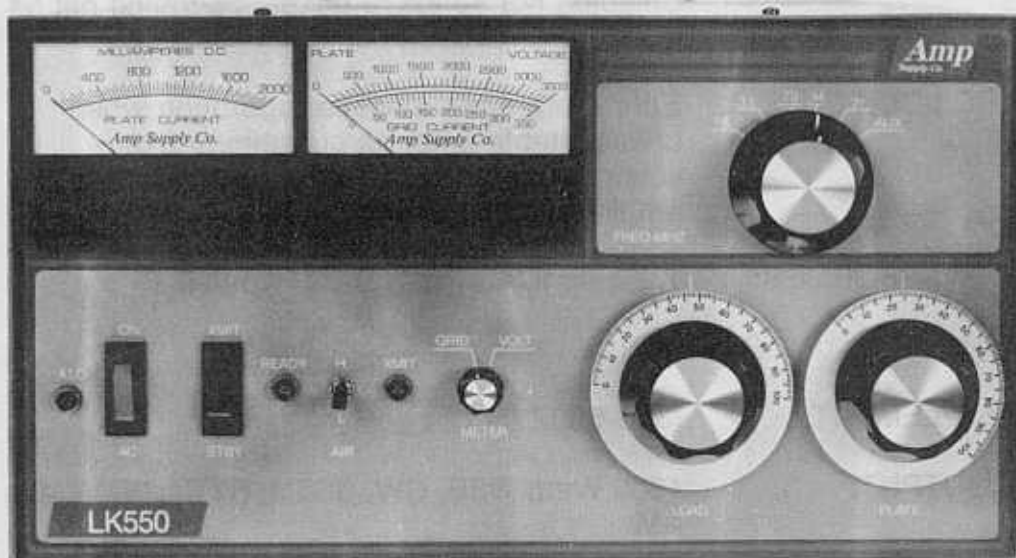

**AC-ON Illuminated ROCKER SWITCH** - Turns power on and off.

**XMIT-STBY ROCKER SWITCH** - Turns the amp from Standby to Operate mode. Operate mode enables a green LED.

**BAND-SWITCH** - Selects desired band.

**HI/LO AIR SWITCH** - Provides higher volume cooling air for extended operation.

**XMIT** - Red LED

**PLATE AND LOAD KNOBS** - Tuning adjusts Pi-Network capacitors in tank circuit for proper resonance and loading on all bands.

**PLATE CURRENT METER** - Continuously monitors plate current of 3-500Z tube(s).

**GRID-VOLT METER** - By use of the meter switch can monitor plate volts (0-3500 V) or grid current (0-350 mA).

**ALO LED** - Enabled when unacceptable plate/grid currents and/or voltages are encountered or improper amplifier tuning exists .