

QSK OPERATION WARNING!

QSK OPERATION WITH YOUR LK450-500-550 SERIES AMPLIFIER IS ENABLED ONLY IF YOUR KEY, KEYSER OR COMPUTER WITH PROPER INTERFACE IS PLUGGED INTO THE KEY IN JACK ON THE REAR PANEL OF YOUR AMPLIFIER, AND THE KEY OUT JACK LINE IS ROUTED TO THE TRANSCEIVER KEYING INPUT. THE QSK CIRCUITRY IN THE AMPLIFIER MUST CONTROL THE QSK FEATURES OF YOUR TRANSCEIVER. FAILURE TO OBSERVE PROPER INTERCONNECTION PROCEDURES WILL RESULT IN DAMAGE TO THE QSK SYSTEM AND WILL VOID YOUR WARRANTY.

SEPTEMBER 1, 1988